
### **Control Board History**

The ED2.0 control board is an ABB global component used in various magnetically actuated breakers including AMVAC indoor breakers, R-MAG outdoor breakers, and Roll-in replacement breakers. Revisions occur over time to enhance product capabilities and performance and to substitute components that may no longer be

available or even to reflect the improvement in manufacturing capabilities. Below is a simplified control board revision timeline with emphasis on Revision 9 as this is when the important update to extend aluminum electrolyte capacitor life occurred.

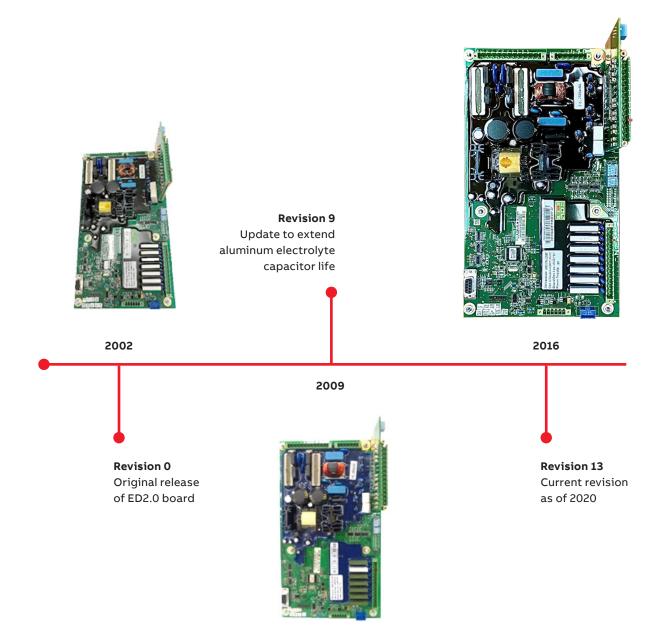

## When to Consider Control Board Replacement


To maximize the reliability of your equipment ABB recommends proactively replacing the ED2.0 control board based on two criteria: revision level and age. These boards are readily available and can be replaced in the field with no special tools or equipment.

#### **Revision Level**

If earlier than Revision 9, ABB recommends replacing the board immediately. To verify revision level, please check the label near the center of the board (see picture below).

### Age

Depending on environmental conditions, the control board life expectancy can range from 15-30 years. The decision to replace on age alone should take into consideration the site's specific environmental conditions. To verify age, please check the manufacturing date of the breaker. This date is located on the rating label on the front cover of the breaker. If no date is shown, contact the factory at 843-413-4700.

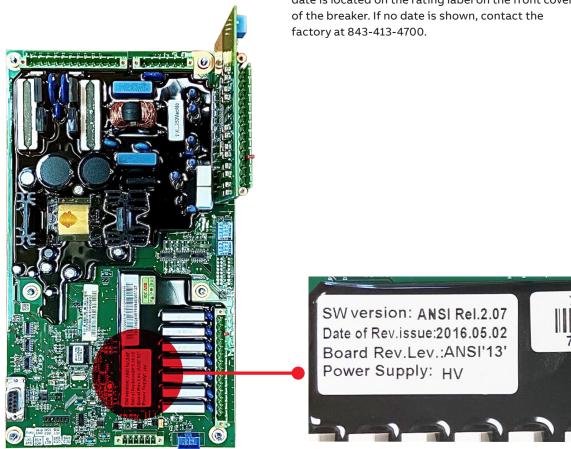

# When to Consider Capacitor Replacement

To maximize the reliability of your equipment ABB recommends proactively replacing capacitors based on two criteria: test results and age. These capacitors are readily available and can be replaced in the field with no special tools or equipment.



#### **Test Results**

ABB recommends checking capacitor performance periodically and during scheduled maintenance. Follow the steps below to test:

- 1. Connect control power and wait for the capacitors to fully charge the ready light on the pushbutton will stay illuminated when the breaker is charged.
- 2. Disconnect control power and note how long the ready light stays on.

If the ready light turns off immediately, the capacitors should be replaced as soon as possible.

If the ready light blinks within 4 seconds or less, the capacitors should be replaced on the next maintenance cycle.

#### Age

Depending on environmental conditions, capacitors can have a life expectancy of 15-30 years. The decision to replace based on age alone should take into consideration the sites specific environmental conditions. To verify the capacitors age, please check the manufacturing date of the breaker. This date is located on the rating label on the front cover of the breaker. If no date is shown, contact the factory at 843-413-4700.

## **Replacement Parts**

Table 01: Replacement part numbers by breaker type.

AMVAC and Roll-in Replacement breakers should have two capacitors per breaker. The part numbers supplied below will provide the capacitors as well as the wiring bundle to plug the capacitors into the control board.

R-MAG breakers require different quantities of capacitors depending on the maximum voltage rating (15kV, 27kV, or 38kV). See Table 1 below.

Note: Complete replacement kits consisting of both the control board and capacitors are also available. Please contact the factory at 843-413-4700 to learn more about this option.







Description	AMVAC	R-MAG	Roll-in Replacements
Control Board LV	19911P30, Model 2/3		
(24-48 VAC, VDC)	1VCF339699S0042, Model 4	2RGA014458P0001	19911P30
Control Board HV	19911P40, Model 2/3	20010111500000	10011810
(77-280 VAC, VDC)	1VCF339699S0041, Model 4	2RGA014458P0002	19911P40
		2RGA014444A0001	
		15kV (Qty 2)	
Capacitor Standard	1VCF359899S0151	27kV (Qty 3)	1VCF359899S0151
Temp (-40 to 85C)	(Kit with 2 Caps and wire bundle)	38kV (Qty 4)	(Kit with 2 Caps and wire bundle)
		2RGA014444A0002	
		15kV (Qty 2)	
Capacitor Extreme		27kV (Qty 3)	
Temp (-55 to 105C)	-	38kV (Qty 4)	-